
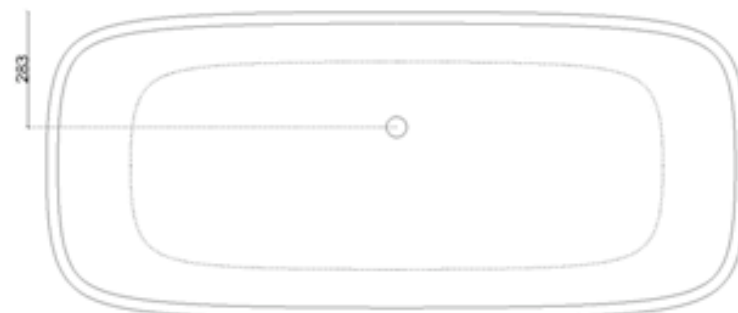


CARMEN BATH

Installation instructions

DADO recommends that you use a qualified installer. Adhere to all instructions. We will not accept responsibility or incorrect installation.

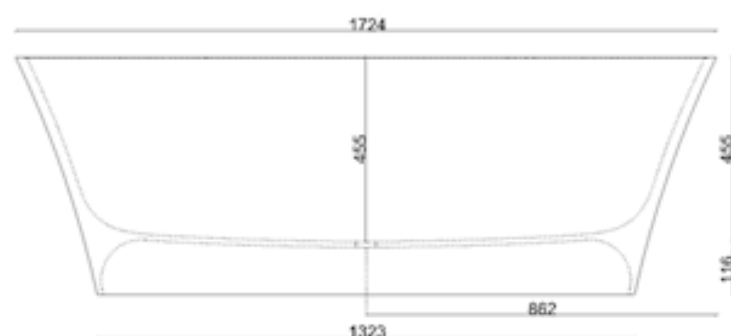

1

Ensure that the drain pipe in the floor is thoroughly cleaned before the bath is placed into position and that the waste hole is positioned correctly.

2

Before the bath is fixed to the floor ensure that the bath waste and the drainage pipe line up.

3

Make sure all surfaces are dry and stable before installing the bathtub. This will ensure durable adhesion.

4

Mark an area with tape on the floor where the bathtub is going to stand with the template provided, the floor can now be properly prepared.

5

Position the bathtub and connect the waste, use a spirit level to ensure that the bathtub is level. Fill the bathtub with water, let the water run through the waste and check for leaks. Apply a bead of silicone around the base of the bathtub.